


To be put in binder FM, FH.

Date	Group	No.	Version	Page
9.99	370	106 01		1(8)

This bulletin supplements Service Manual Groups 37
TSP104002 and TSP119544

Wiring diagram
Geartronic
FH12

Wiring diagram, Geartronic, FH12 Wiring dia- gram, Geartronic, FH12

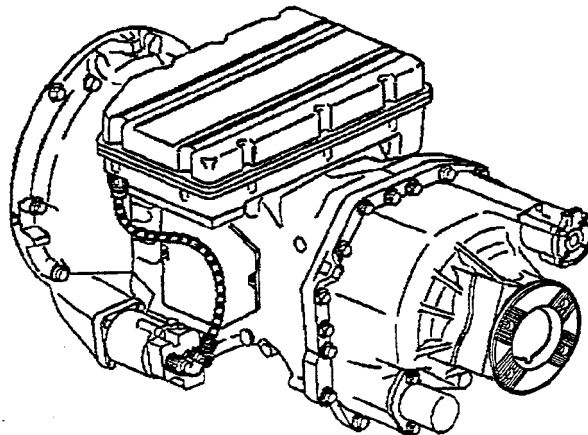

T4014180


Contents

- "Wiring diagram" page 2
- "Cable harness, cab, LHD" page 5
- "Cable harness, cab, RHD" page 6
- "Cable harness, chassis" page 7
- "Component register" page 8

Wiring diagram


GEARTRONIC, AUTOMATIC GEARSHIFT

L0


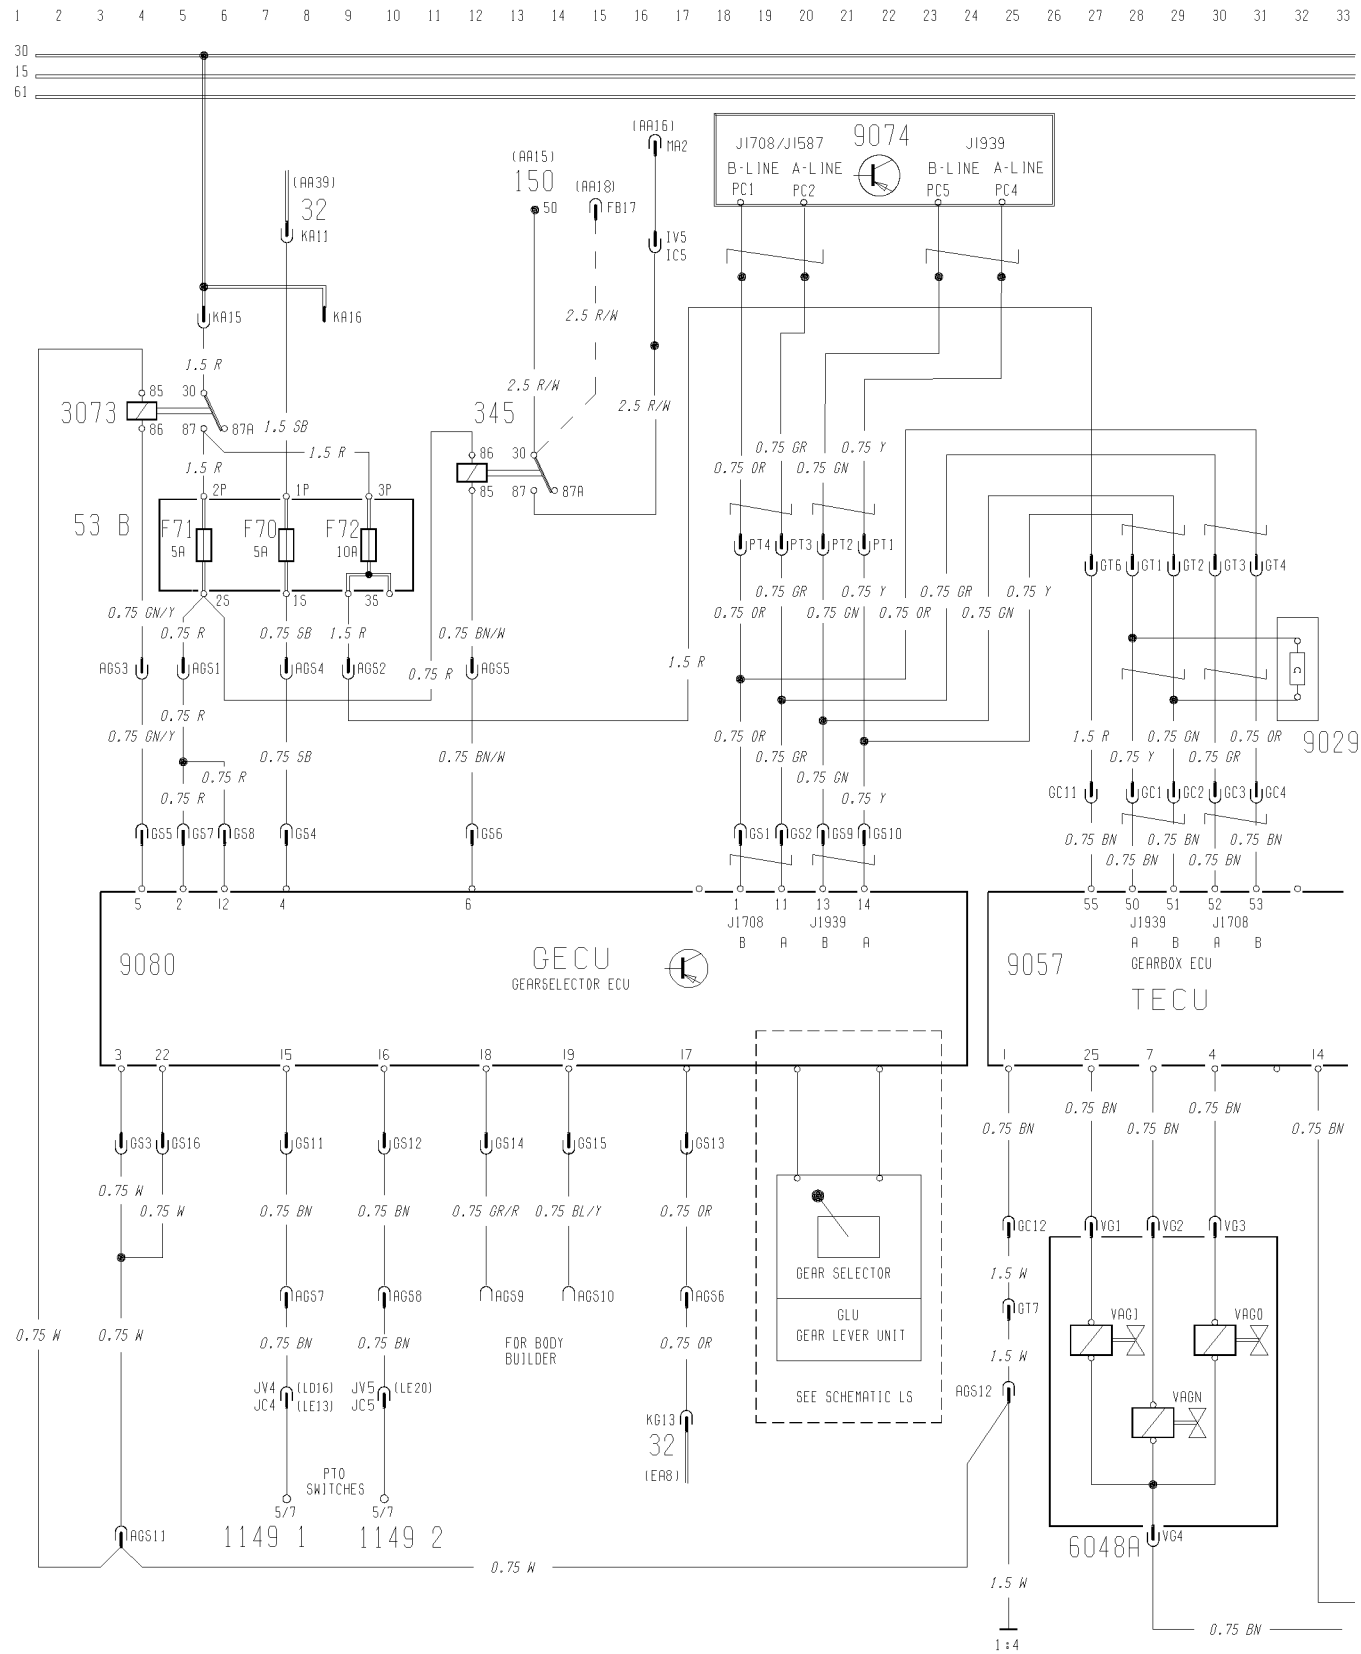


LO


33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65

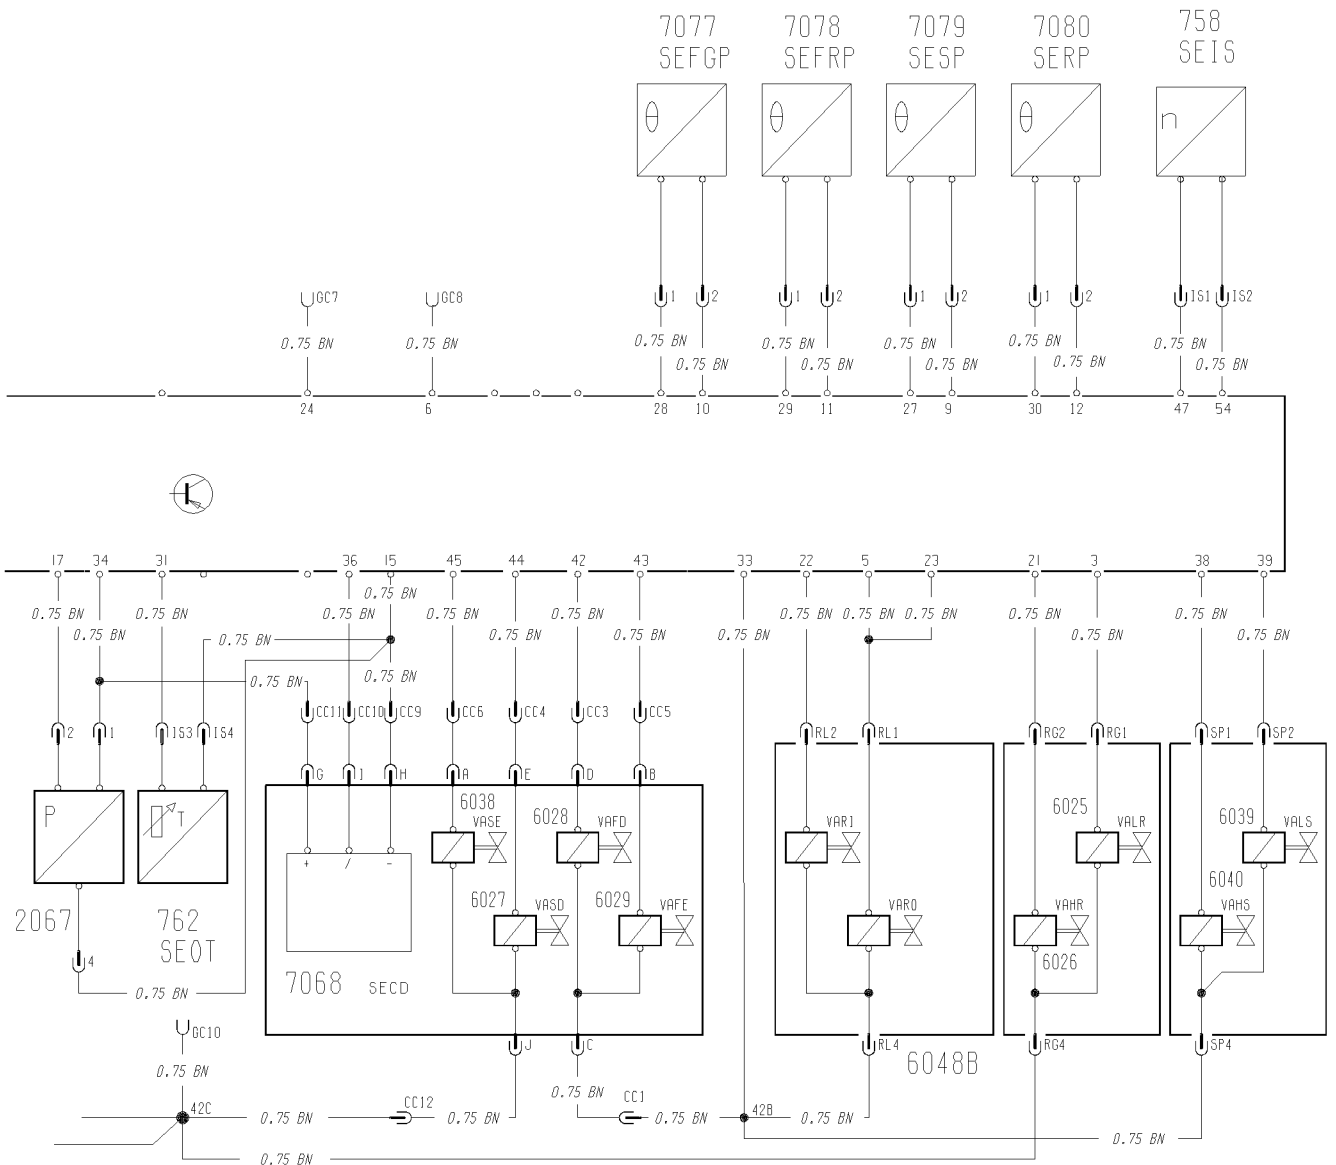



GLU, GEAR SELECTOR

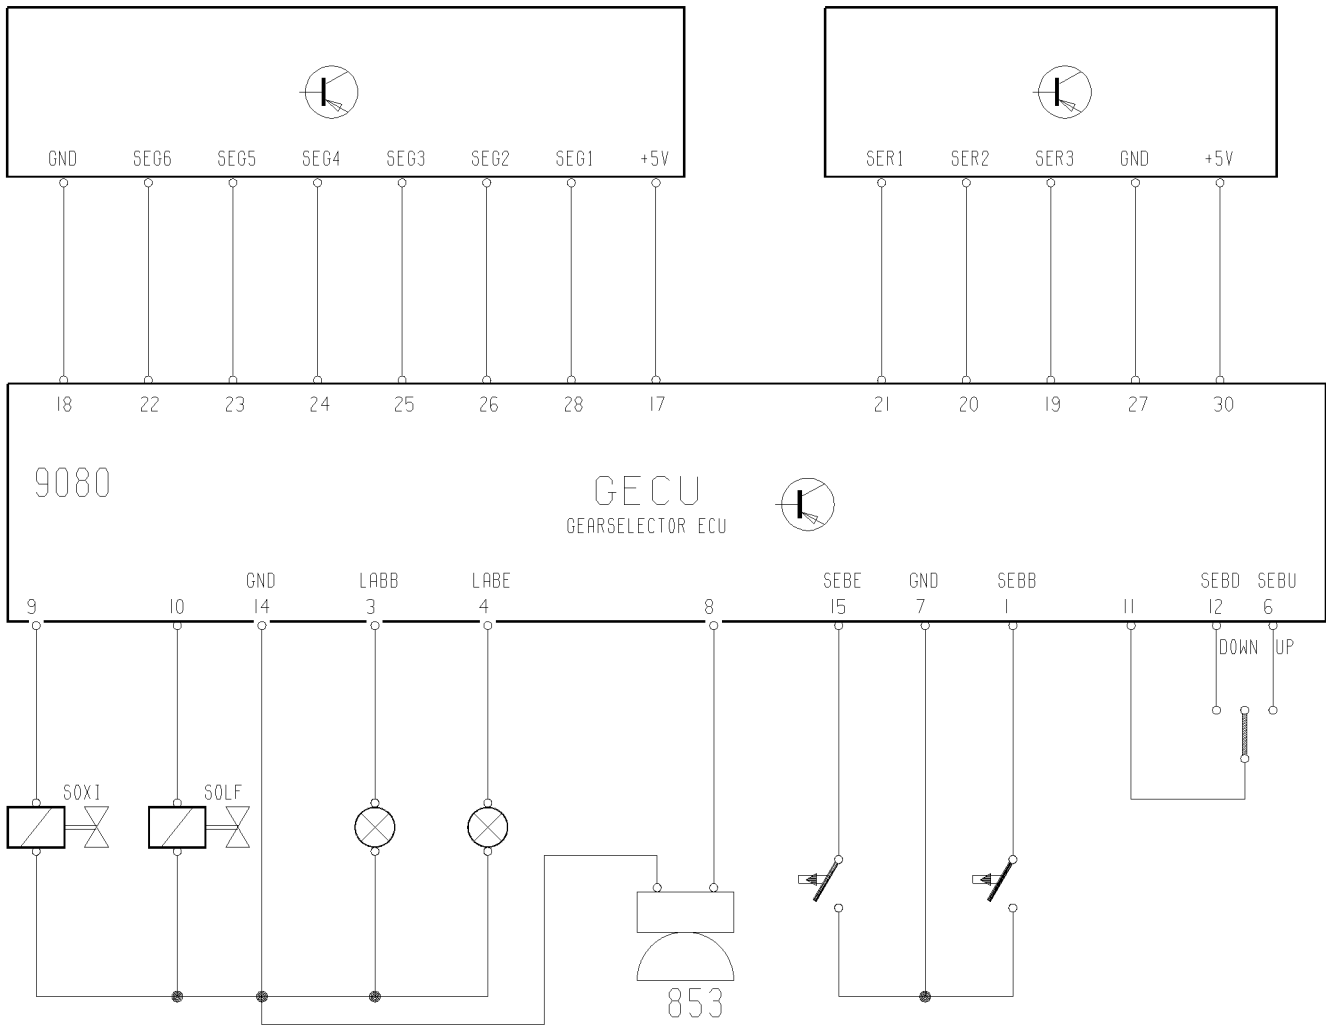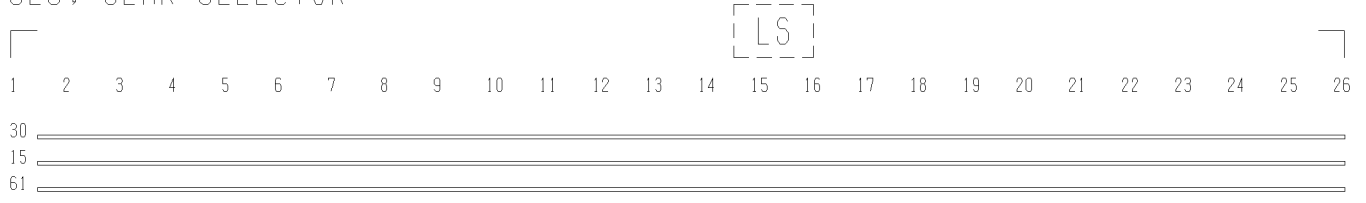


Cable harness, cab, LHD

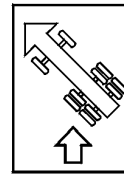




1413, 1484

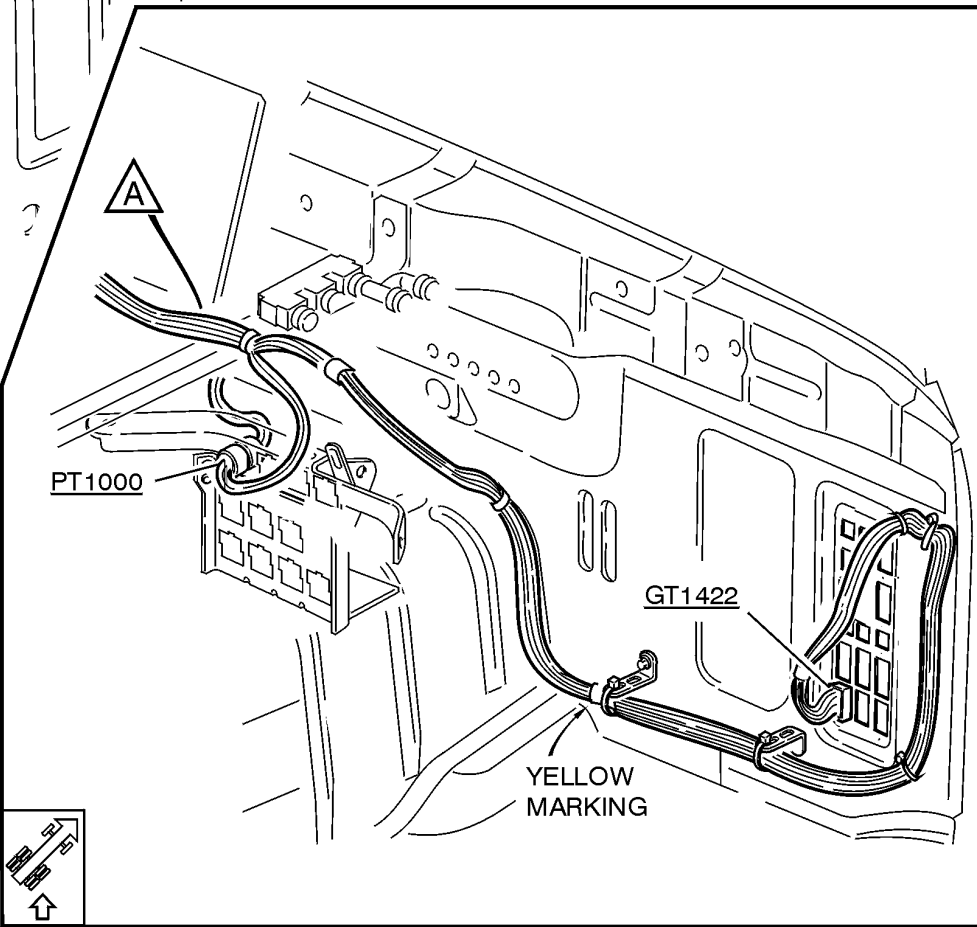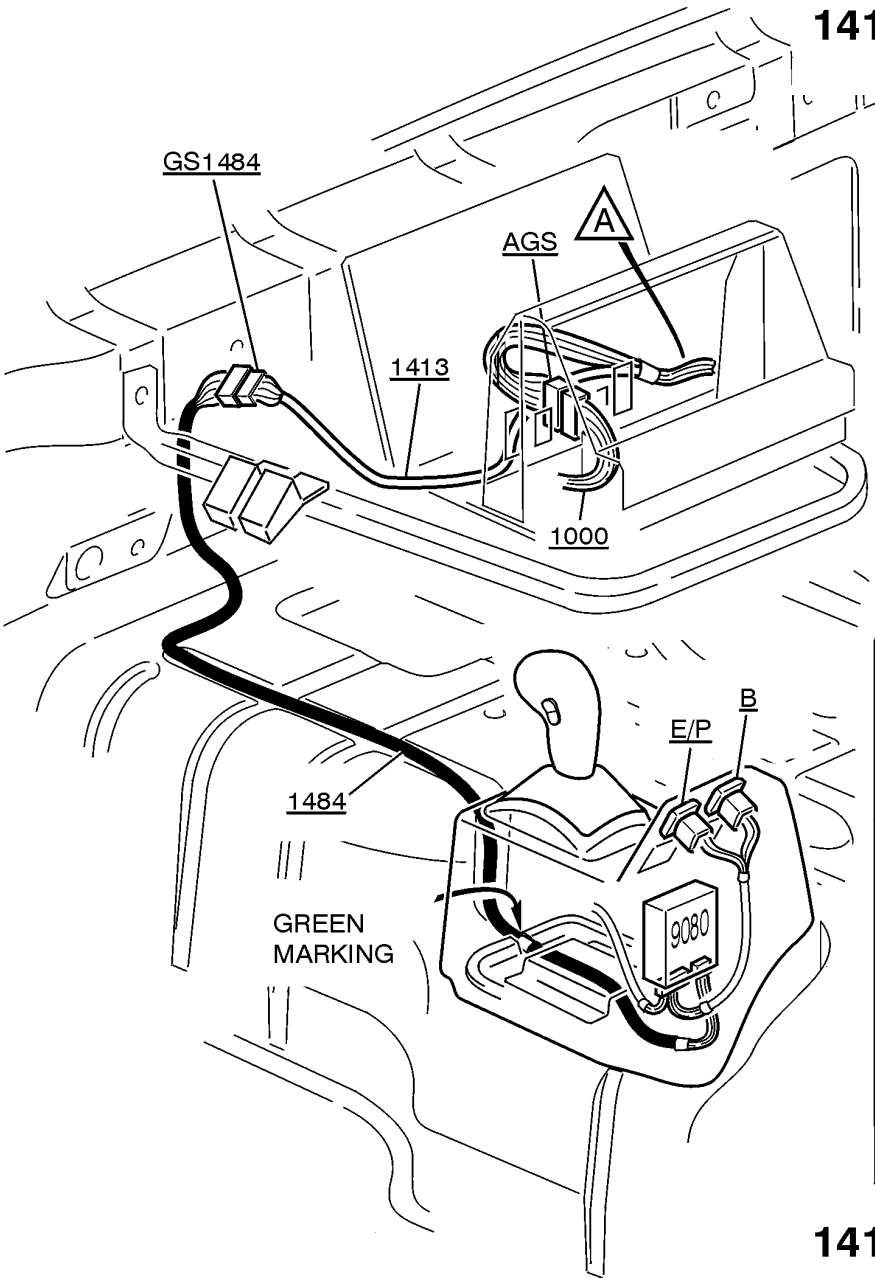


1413, 1484

 

Cable harness, cab, RHD

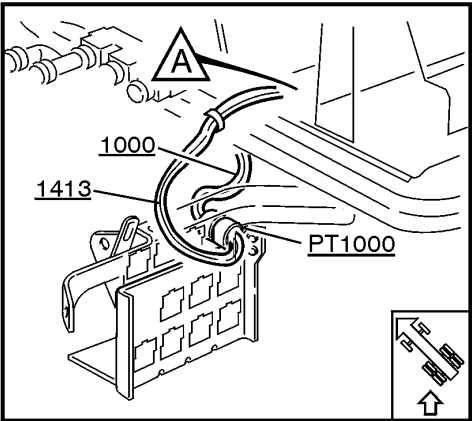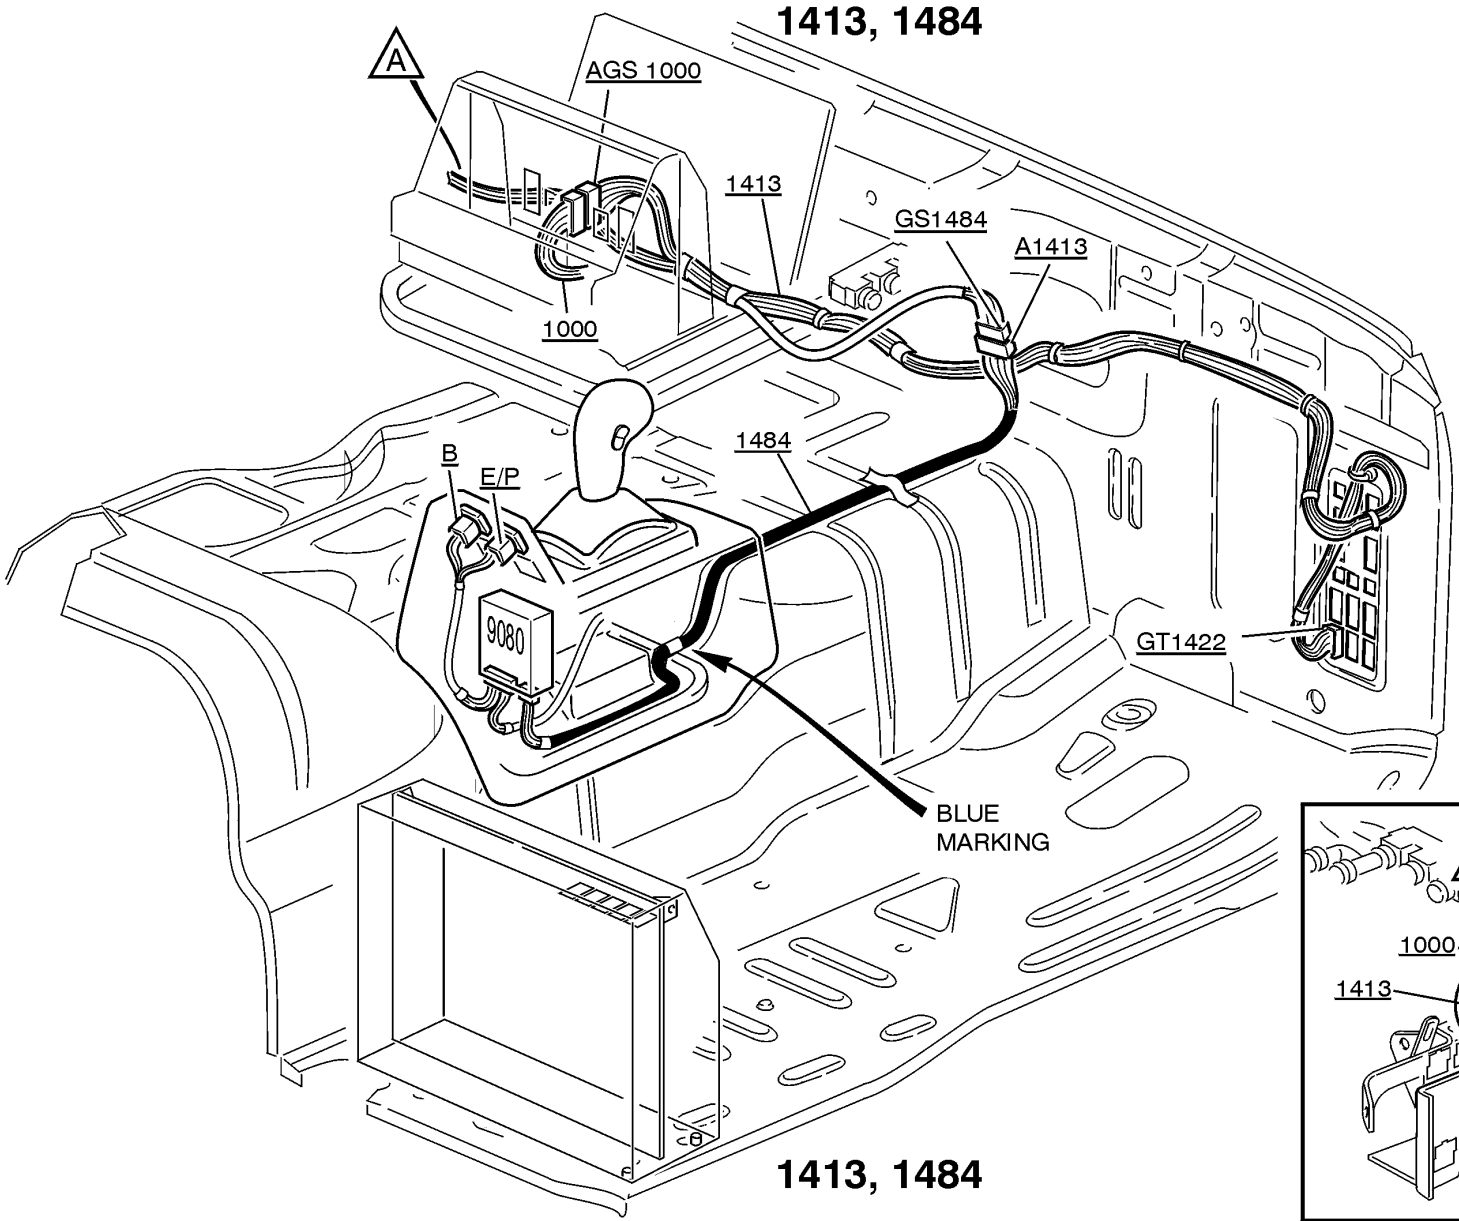
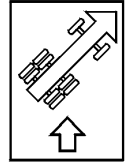


Cable harness, chassis

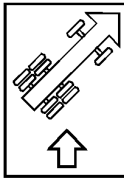

1422

1422

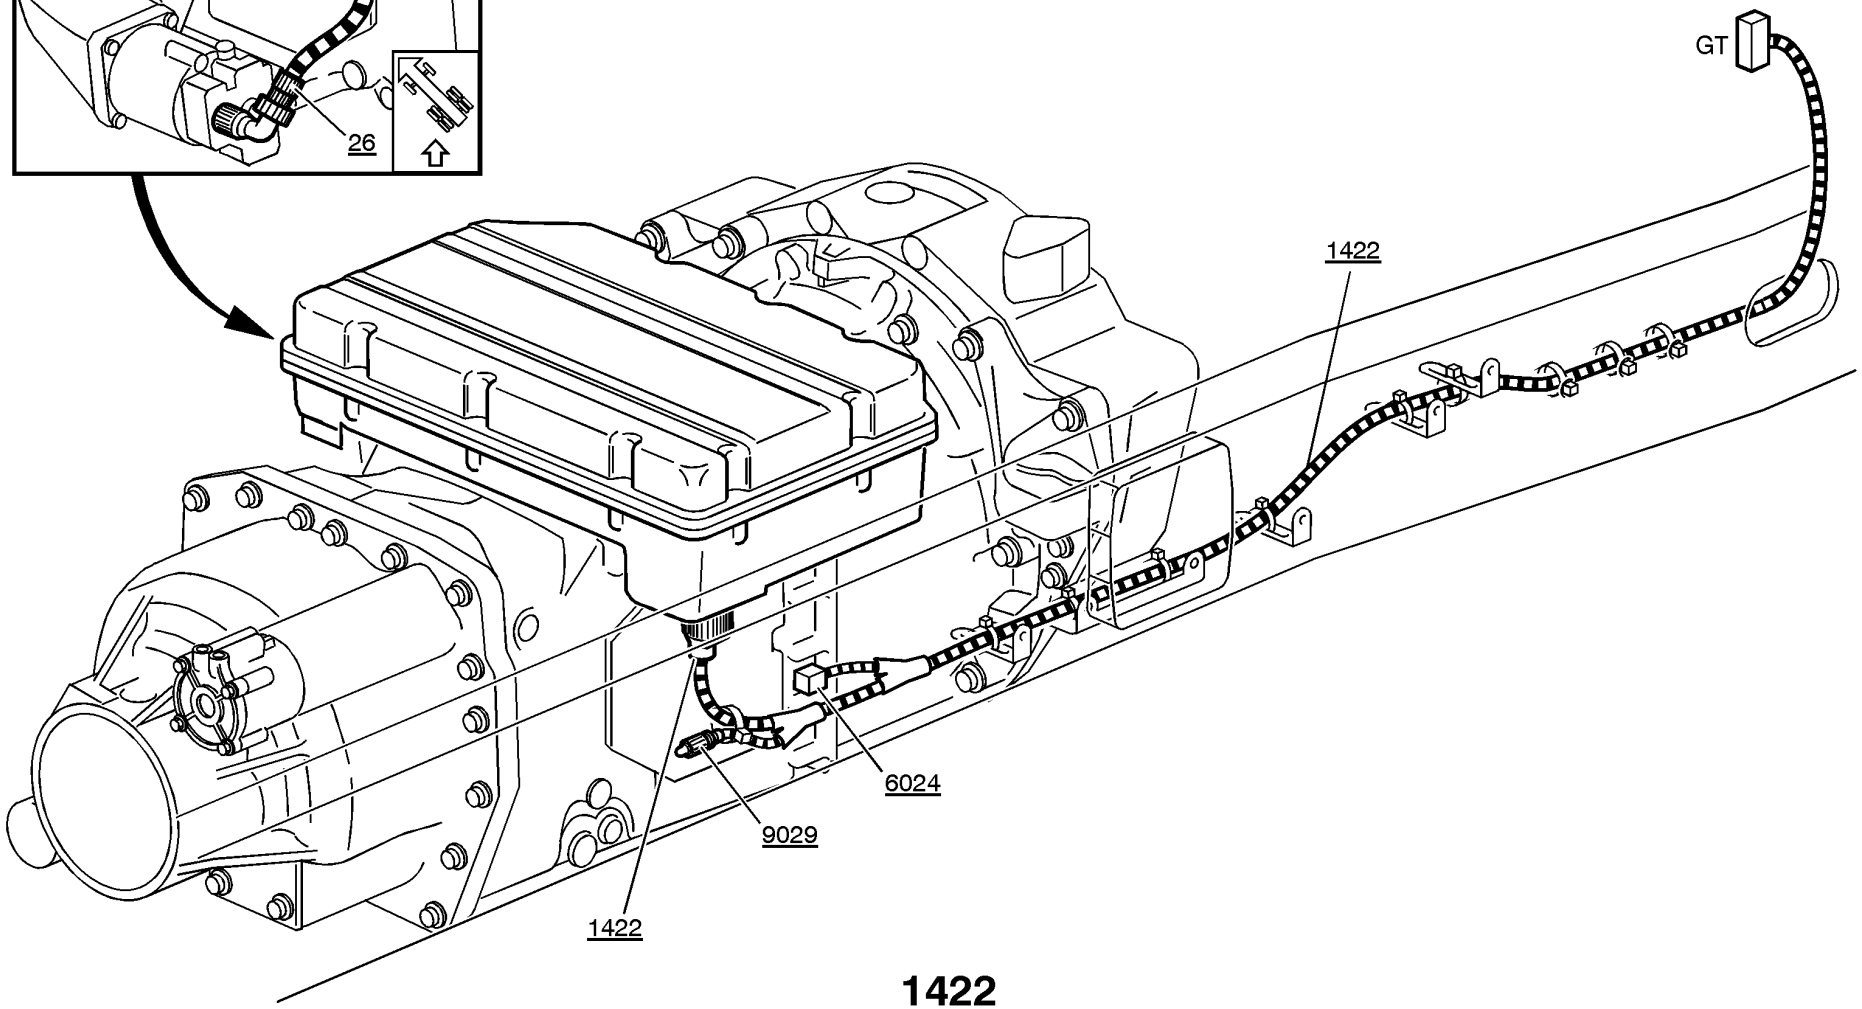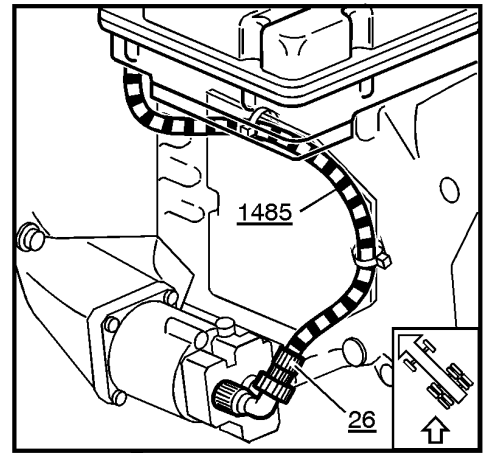

Component register

26	Connector, gearbox	6048 A	Solenoid valve block, gearbox
32	Circuit board, distribution box	6048 B	Solenoid valve block, gearbox
53 B	Fuse holder, 3-pin	758 SEIS	Speed sensor, gearbox
150	Ignition switch	762 SEOT	Sensor, gearbox oil temperature
1000	Cable harness, instrument	7068	Sensor, clutch position
1149 1	Cable harness, power take-off	7077 SEFGP	Sensor, gear position
1149 2	Cable harness, power take-off	7078 SEFRP	Sensor, gear position (rear position)
1413	Cable harness, AGS/PS, cab	7079 SESP	Sensor, split position
1422	Cable harness, AGS-chassis	7080 SERP	Sensor, range position
1484	Cable harness, adapter, AGS/PS, lever base	853	Buzzer
1485	Cable harness, clutch	9029	Termination resistor, comms. bus
2067	Connector, indication lamp / air pressure	9057	Control unit, automatic transmission
345	Relay, starter interlock	9074	Vehicle management system
3073	Relay, AGS 1	9080	Control unit, gear selector
6024	Solenoid valve, power take-off		